

# Mooney\* **FlowMax\*** Regulator

Instruction Manual (Rev. A)



THESE INSTRUCTIONS PROVIDE THE CUSTOMER/OPERATOR WITH IMPORTANT PROJECT-SPECIFIC REFERENCE INFORMATION IN ADDITION TO THE CUSTOMER/OPERATOR'S NORMAL OPERATION AND MAINTENANCE PROCEDURES. SINCE OPERATION AND MAINTENANCE PHILOSOPHIES VARY, GE (GENERAL ELECTRIC COMPANY AND ITS SUBSIDIARIES AND AFFILIATES) DOES NOT ATTEMPT TO DICTATE SPECIFIC PROCEDURES, BUT TO PROVIDE BASIC LIMITATIONS AND REQUIREMENTS CREATED BY THE TYPE OF EQUIPMENT PROVIDED.

THESE INSTRUCTIONS ASSUME THAT OPERATORS ALREADY HAVE A GENERAL UNDERSTANDING OF THE REQUIREMENTS FOR SAFE OPERATION OF MECHANICAL AND ELECTRICAL EQUIPMENT IN POTENTIALLY HAZARDOUS ENVIRONMENTS. THEREFORE, THESE INSTRUCTIONS SHOULD BE INTERPRETED AND APPLIED IN CONJUNCTION WITH THE SAFETY RULES AND REGULATIONS APPLICABLE AT THE SITE AND THE PARTICULAR REQUIREMENTS FOR OPERATION OF OTHER EQUIPMENT AT THE SITE.

THESE INSTRUCTIONS DO NOT PURPORT TO COVER ALL DETAILS OR VARIATIONS IN EQUIPMENT NOR TO PROVIDE FOR EVERY POSSIBLE CONTINGENCY TO BE MET IN CONNECTION WITH INSTALLATION, OPERATION OR MAINTENANCE. SHOULD FURTHER INFORMATION BE DESIRED OR SHOULD PARTICULAR PROBLEMS ARISE WHICH ARE NOT COVERED SUFFICIENTLY FOR THE CUSTOMER/OPERATOR'S PURPOSES THE MATTER SHOULD BE REFERRED TO GE.

THE RIGHTS, OBLIGATIONS AND LIABILITIES OF GE AND THE CUSTOMER/OPERATOR ARE STRICTLY LIMITED TO THOSE EXPRESSLY PROVIDED IN THE CONTRACT RELATING TO THE SUPPLY OF THE EQUIPMENT. NO ADDITIONAL REPRESENTATIONS OR WARRANTIES BY GE REGARDING THE EQUIPMENT OR ITS USE ARE GIVEN OR IMPLIED BY THE ISSUE OF THESE INSTRUCTIONS.

THESE INSTRUCTIONS ARE FURNISHED TO THE CUSTOMER/OPERATOR SOLELY TO ASSIST IN THE INSTALLATION, TESTING, OPERATION, AND/OR MAINTENANCE OF THE EQUIPMENT DESCRIBED. THIS DOCUMENT SHALL NOT BE REPRODUCED IN WHOLE OR IN PART WITHOUT THE WRITTEN APPROVAL OF GE.

## Scope

This manual provides instructions for the Installation, Operation, and Maintenance of the Mooney FlowMax Regulator (instructions for the Series 20 and 20L Pilots can be found in separate manuals). This manual is divided into the following sections:

## Table of Contents

Product Description .....	1	Piping Schematics.....	5
Principles of Operation .....	2	Start-up and Operation.....	12
Nameplate Information .....	3	Maintenance .....	15
Regulator Markings.....	3	Bolt Torque Specifications.....	26
Hydrostatic Testing .....	4	Troubleshooting .....	27
Installation .....	4	Warranty.....	28

## Product Description

The Mooney FlowMax is an easy to maintain regulator designed to be used with a self-contained pilot system. The Mooney FlowMax Regulator has several unique features that add to its versatility, such as:

- In-line maintenance
- A single maximum pressure rating for all components
- One actuator for all pressures and differentials
- A compact, low-volume actuator housing for quick response and lightweight design
- Top-entry design
- Maximum flow at a low differential
- Increased closing force with an increase in inlet pressure

**Table 1** - Materials of Construction

Materials of Construction	
Body & Spring Case	ASTM A 395 Ductile Iron
Actuator Housing	A 356-T 6 Cast Aluminum
Spring Case	A 356-T 6 Cast Aluminum
Plug	Nitrile
Diaphragm	Nitrile/Nylon
O-Ring & Seals	Nitrile
Bolting	ASTM B8 or Equal
Spring	Music Wire

Table 2 - Specifications

Specifications	Imperial	Metric
<b>Sizes</b>	2,3,4, and 6 inch	DN 50, DN 80, DN 100, DN 150
<b>Body Style</b>	Single Port	Single Port
<b>End Connections</b>	150 CL FF, 150 CL RF, Flanged NPT (2" Only)	Contact Factory
<b>Temperature Working Emergency</b>	-20°F to 150°F -40°F to 175°F	-29°C to 66°C -40°C to 80°C
<b>Maximum Operating Differential</b>	250 psi	17 bar
<b>Maximum Casing Pressure</b>	250 psi	17 bar
<b>Minimum Differential (Fully Open)</b>	3 psi	0.21 bar
<b>Outlet Pressure Range</b>	Series 20L: 5 in w.c. to 8 psi	0.01 - 0.55 bar
	Series 20: 3 - 248 psi	0.21 - 17 bar
<b>Maximum Inlet Pressure</b>	1480 psig (limited by flange or pilot rating)	(102 bar) (limited by flange or pilot rating)
<b>Pilot Supply Body Tap</b>	One 1/4" - 18 NPT	One 1/4" - 18 NPT
<b>Sense Line Tap</b>	Two 1/2" - 14 NPT	Two 1/2" - 14 NPT

## Principle of Operation

(Refer to Figure 1)

When the downstream pressure is greater than the set point of the pilot, the pilot is closed, resulting in equal pressure above and below the main diaphragm. With a balancing diaphragm area slightly larger than the seat area, the resulting closing force, along with the force of the main spring, forces the plug against the seat.

With an increase in demand, the outlet pressure will begin to drop and decrease the pressure above the main diaphragm. The drop of the outlet pressure below the pilot set point will cause the pilot to open.

As the pilot opens, pressure increases underneath the main diaphragm faster than pressure can bleed through the internal restrictor. The imbalance in pressure on the main diaphragm overcomes the spring force and the additional closing force from the balancing diaphragm, causing the plug to rise off the seat and satisfy the flow demand.

Once the flow demand is satisfied and the downstream pressure begins to increase, the pressure above the main diaphragm and in the pilot sense cavity rises. This causes the pilot to close. The pressure below the main diaphragm bleeds through the internal restrictor until pressure equalizes above and below the main diaphragm. The forces of the main spring and the oversized balancing diaphragm then close the plug on the seat.

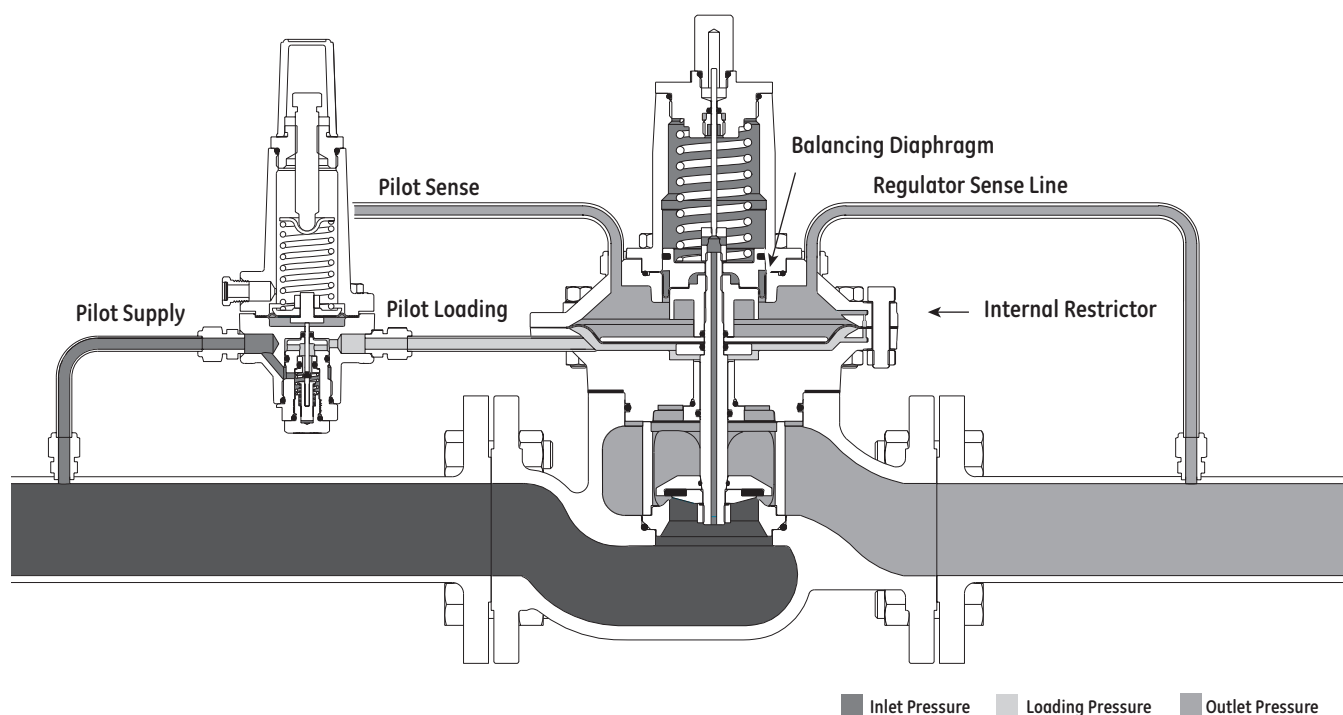


Figure 1

## Nameplate Information

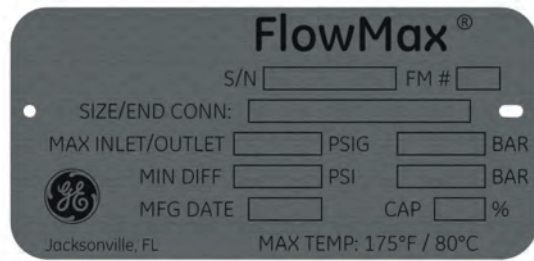


Figure 2 - Nameplate

Item	Definition
FlowMax*	Trademarked name
S/N	Serial number assigned to regulator
FM #	FlowMax product identification
Size/End Conn	Line size of body and type of end connection
Max Inlet/Outlet Pressure	Maximum inlet or outlet pressure psig (bar)
Cap %	Percent capacity of maximum for the regulator
Mfg. Date	Date of manufacture
Min. Differential	Minimum differential required to fully open regulator
Max Temperature	Maximum operating temperature in degrees Fahrenheit

## Regulator Markings

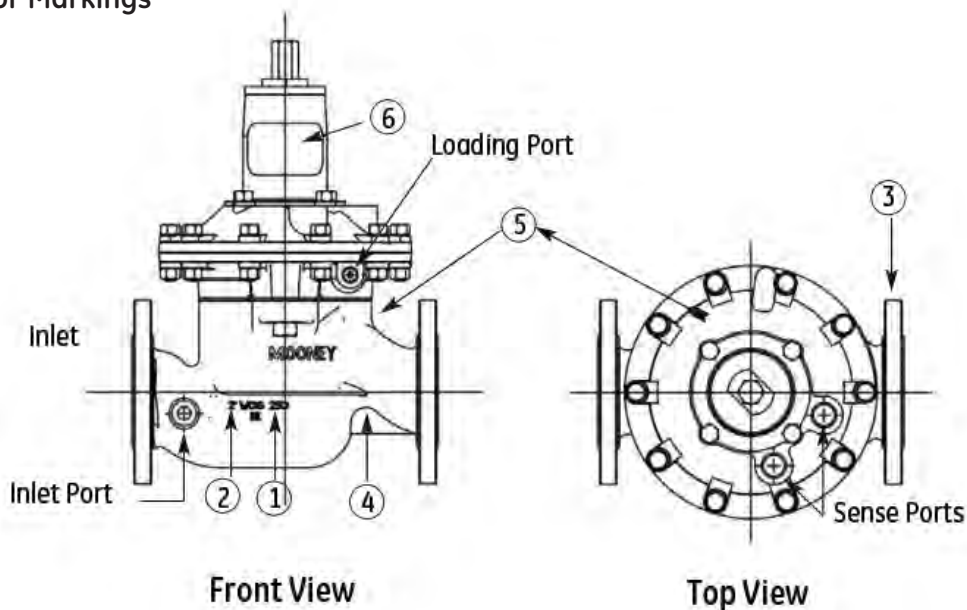


Figure 3 - Regulator Markings

1. American National Standards Institute (ANSI) pressure class rating of the regulator.
2. Line size of body.
3. ANSI pressure class rating of the flange.
4. Indication that the regulator has been hydrostatically tested according to code requirements.
5. The Serial Number is stamped on the spring case, spacer, and Body.
6. The Nameplate location.

## Hydrostatic Testing

### WARNING

Installation and testing of the FlowMax Regulator should be made by trained, qualified personnel familiar with high-pressure piping and pilot-operated regulators.

All FlowMax regulators are hydrostatically tested at the factory prior to shipment according to ISA-S75.19-1989 and MSS-SP-61 standards. If it is necessary to retest the Regulator body, follow the procedures listed below.

**NOTE: This Procedure applies to the regulator body only. If actuator retesting is required, contact the factory for proper procedures.**

1. Disconnect and remove the pilot inlet and actuator sense control line(s).
2. Remove the body-to-actuator bolts and remove the actuator and pilot.



Figure 4 - Installed hydrostatic plug

3. Plug the pilot supply line in the regulator body or, if applicable, the pilot filter.
4. Remove the cage, seat, and o-ring from the body. CAUTION! DO NOT DAMAGE THE SEAT SEALING SURFACE (KNIFE-EDGE).
5. Plug the flange/actuator mounting surface on the body.

**NOTE: A plug for hydrostatically testing the Body is available from the factory (see Figure 4).**

6. Pressurize the system to the required maximum hydrostatic pressure. **DO NOT EXCEED 375 PSIG (26 bar).**
7. After the hydrostatic test is completed and the body is dry and clean, follow the assembly procedures in the maintenance section of this manual.

## Installation

### WARNING

Personal injury, equipment damage, or leakage due to explosion of accumulated gas or bursting of pressure containing parts may result if this regulator is overpressured or is installed where service conditions could exceed the limits given in the specification of this manual or on the nameplate, or where conditions exceed any ratings of the adjacent piping or piping connections. Verify the limitations of both regulator and pilot to ensure neither device is overpressured. To reduce the chances of such injury or damage, provide pressure relieving or pressure limiting devices (as required by the U.S. code of Federal Regulations, by the National Fire Codes of the National Fire Protection Association, or by other applicable codes) to prevent service conditions from exceeding those limits. Additionally, physical damage to the regulator, pilot, or tubing can cause personal injury and/or property damage due to explosion of accumulated gas. To reduce the chances of such injury and damage, install the regulator in a safe location.

**NOTE: The following installation instructions are based upon using pilots and filters manufactured by GE Oil & Gas. When using equipment from other manufacturers, please contact GE or the local GE representative for product compatibility.**

1. **Personnel:** Installation of the FlowMax regulator should be performed by trained, qualified personnel familiar with high-pressure piping and pilot-operated regulators.
2. **Prior Inspection:** Inspect the main regulator, pilot, and tubing for any damage that might have occurred in shipping. Make sure the body, pilot sense lines, and piping are clear and free of foreign material.
3. **Screwed End Regulators:** Apply a pipe compound to the male threads starting one or two threads back from the end prior to assembling the joint.
4. **Flanged End Regulators:** Use suitable line gaskets and good bolting practices with flanged bodies. Incremental tightening of the line bolts in a crisscross pattern is recommended.

### WARNING

Gas regulators installed in confined or enclosed spaces should be provided with adequate ventilation to prevent the possibility of gas buildup or accumulation from leaks and venting. Leaks or vented gas may accumulate causing personal injury, death, or property damage. Pilot spring cases and the regulator enclosure should be vented to a safe area away from air intakes, or any hazardous location. The vent lines and stacks must be protected against condensation and clogging.

5. **Orientation:** The FlowMax regulator may be installed in any position – the best position being the one that provides easiest access for pilot adjustment and general maintenance.
6. **Control Lines:** Control sense lines should be run from the actuator on the FlowMax regulator to a point 8 to 10 pipe diameters downstream from the regulator (refer to piping schematics). Use Table 3 as a guide for the ideal tubing size to use. Reduce as necessary to connect the actuator.

Outlet Pressure			
Pilot Regulator with:	Less than 2 psi (0.14 bar)	2 to 5 psi (0.14 - 0.35 bar)	Greater than 5 psi (0.35 bar)
Static Sense Line (No Flow) <sup>1</sup>	1/2" Pipe minimum	1/2" Tubing	3/8" Tubing
Sense Line with Flow <sup>2</sup>	3/4" to 1" Pipe	1/2" Pipe	1/2" Tubing

<sup>2</sup> The Sense line of the FlowMax actuator has flow.

**NOTE:** The control line connection should be away from areas of turbulence (such as valves, reducers, and elbows) and should have a full opening into the pipe free from burrs, drill peels, and weld slag. Shutoff valve may be required in the control line(s), if installed, they should be of the full opening type.

7. **Pilot Supply Lines:** Run a 3/8-inch or 1/2-inch pilot supply line from the upstream piping or from the Inlet port body connection on the side of the FlowMax regulator to the pilot Inlet port.
8. **A Filter** in the pilot supply line is recommended to remove particulates from the pilot supply that could affect the variable orifice in the pilot.

**NOTE:** A shutoff regulator is not required in the pilot supply line, but if one is installed, it must be a full-opening type.

9. **Vent Regulators and Gauge Connections:** Vent regulators and gauge connections are recommended in the Inlet and actuator sense piping of the FlowMax regulator.
10. **Interstage Piping:** The recommended length of the interstage piping between monitor regulators is 6 pipe diameters or 36 inches (915 mm), whichever is greater. It is also recommended that the interstage piping be swaged up 1 pipe diameter over the nominal port size of the regulator for working monitor applications.

**FOR EXAMPLE:** A station with two 2" FlowMax regulators in a working monitor configuration should have interstage piping at least 36 inches (915 mm) in length and swaged up to a 3-inch pipe.

The following piping schematics are provided:

1. Single Regulator with Single Pilot. .... Page 6
2. Standby Monitor set with differential pressure **greater** than 10 psid (0.69 bar) (Monitor located downstream). .... Page 7
3. Standby Monitor set with differential pressure **less** than 10 psid (0.69 bar) (Monitor located downstream). .... Page 8
4. Standby Monitor set with differential pressure **greater** than 10 psid (0.69 bar) (Monitor located upstream). .... Page 9
5. Standby Monitor set with differential pressure **less** than 10 psid (0.69 bar) (Monitor located upstream). .... Page 10
6. Working Monitor set. .... Page 11


All drawings show installations with the Series 20 Flowgrid pilot. Consult factory for installation schematics of other manufacturer's pilot on the FlowMax regulator.

[illegible]



## Piping Schematics (cont'd)

### 1. Single Regulator/Single Pilot (Pressure Reducing Regulator)

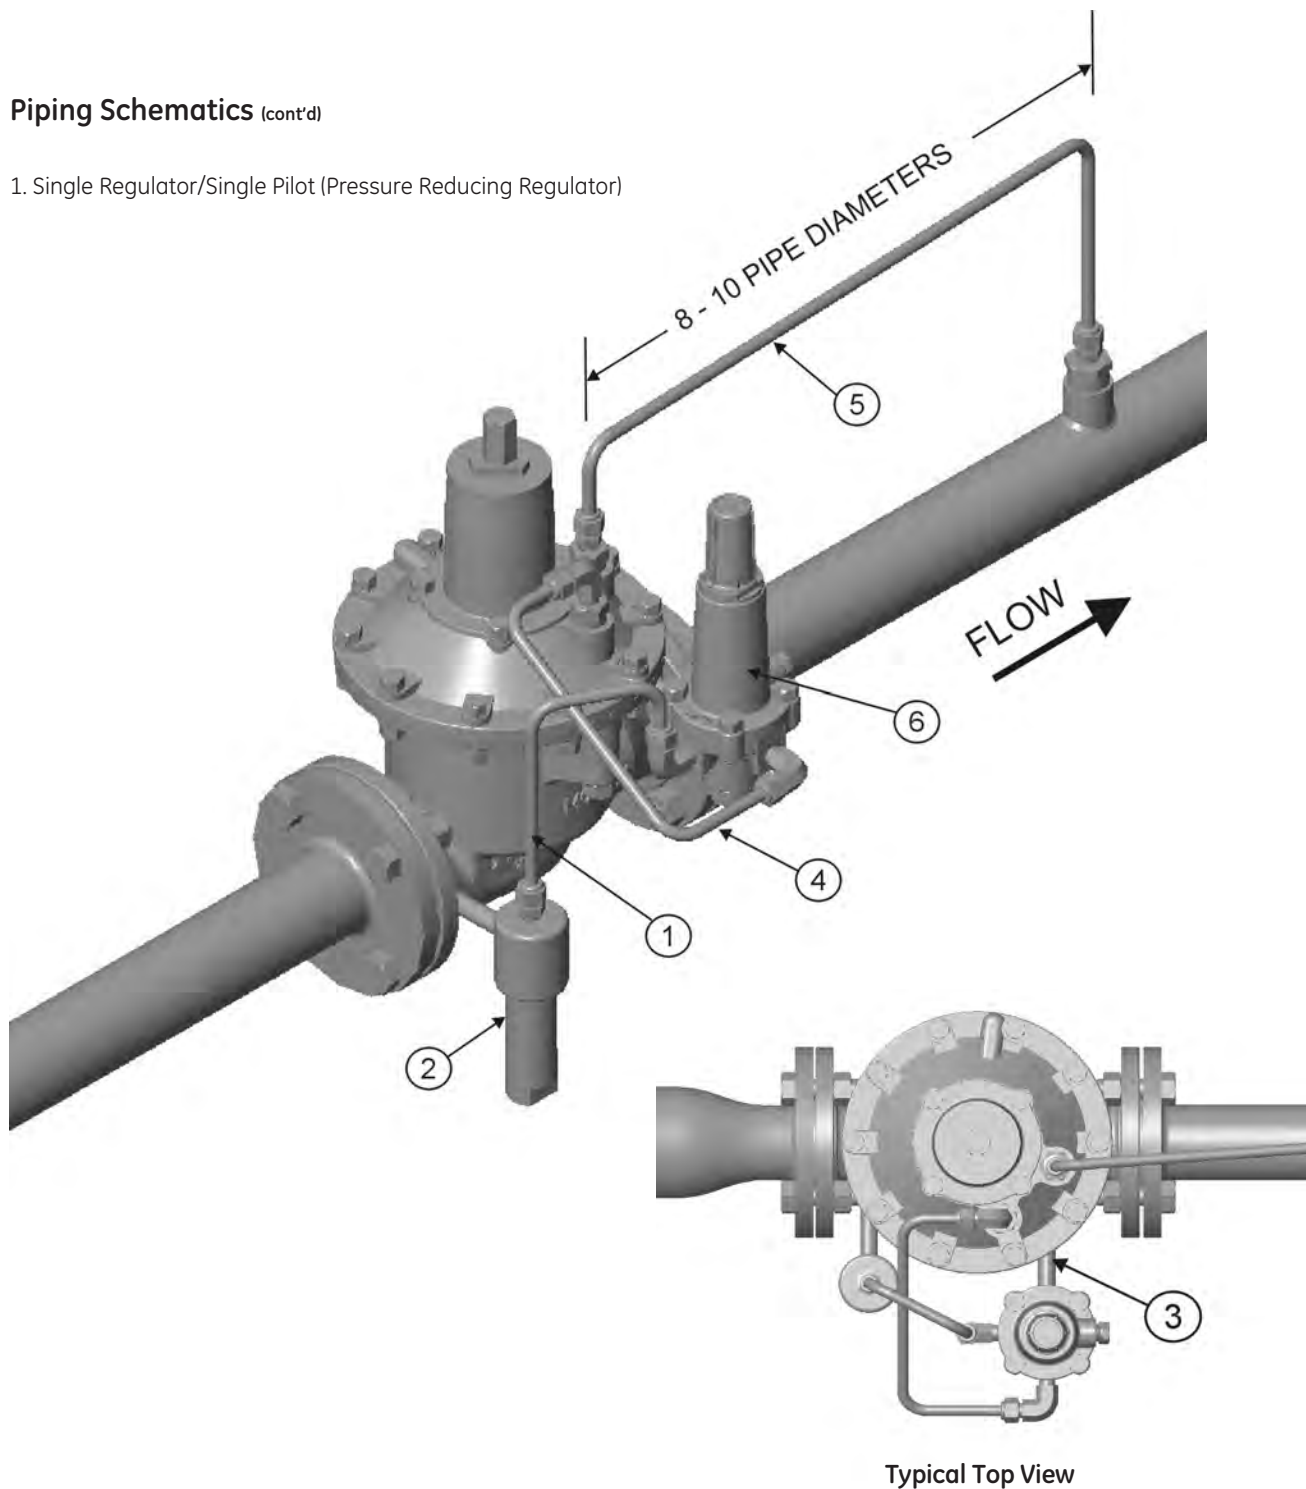


1. Pilot supply tubing from filter OUTLET connection to the Series 20 pilot INLET port.
2. Type 30 filter mounted in inlet piping.
3. OUTLET port of Series 20 pilot connected to Loading connection on the actuator housing of the FlowMax regulator
4. Sense line connecting the SENSE Port on the Series 20 pilot to the sense port on the FlowMax actuator. (Refer to Table 3 on Page 5 for sense piping recommendations)
5. Sense line connecting the FlowMax regulator to the downstream piping.
6. Series 20 pilot with pilot cartridge in PRV mode. Pilot LOADING port is plugged.



## Piping Schematics (cont'd)

2. Standby Monitor with Differential Pressure Greater than 10 psid (0.69 bar)  
(Monitor located downstream)

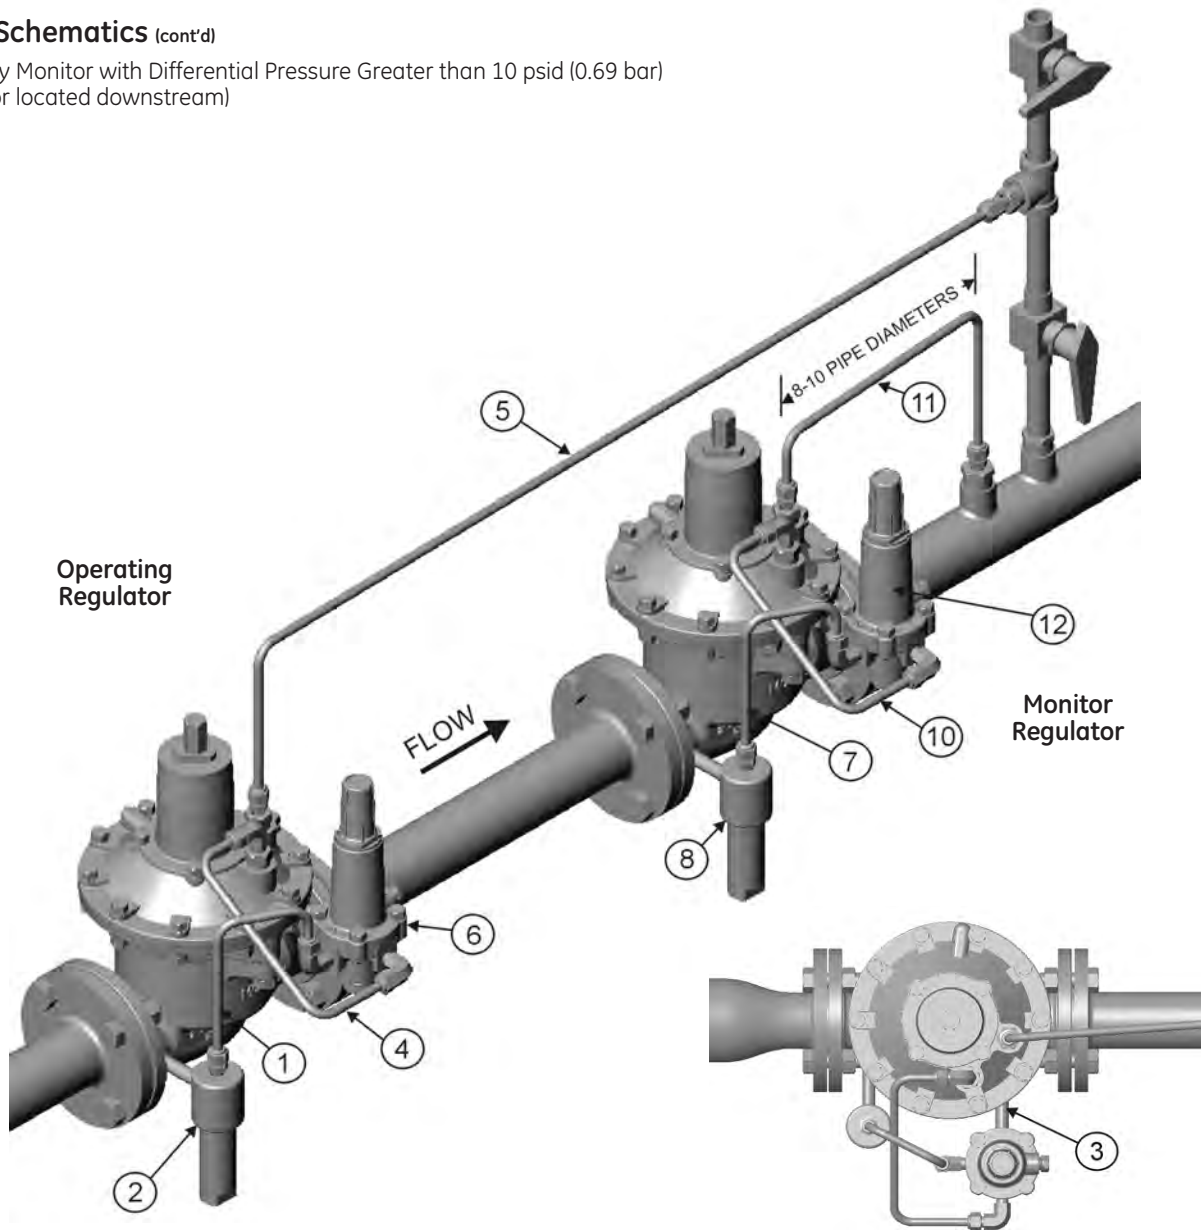


1. Pilot supply tubing from filter OUTLET to Series 20 pilot INLET port.
2. Type 30 Filter mounted in inlet piping.
3. OUTLET Port of Series 20 pilot connected to the loading connection on the actuator housing of the FlowMax regulator.
4. Sense line connecting the SENSE port on the Series 20 pilot to the sense port on the FlowMax actuator. (Refer to Table 3 on Page 5 for sense piping recommendations)
5. Sense line connecting the FlowMax regulator to the downstream piping.
6. Series 20 pilot with pilot cartridge in PRV mode. Pilot LOADING port is plugged.
7. Pilot supply tubing from filter OUTLET to Series 20 pilot INLET port.
8. Type 30 filter mounted in inlet piping.
9. OUTLET port of Series 20 pilot connected to the Loading connection on the actuator housing of the FlowMax regulator (Same as #3, See Typical Top View).
10. Sense line connecting the SENSE port on the Series 20 pilot to the sense port on the FlowMax actuator.
11. Sense line connecting the FlowMax actuator to the downstream piping.
12. Series 20 pilot with pilot cartridge in PRV mode. Pilot LOADING port is plugged.

**Typical Top View**

## Piping Schematics (cont'd)


3. Standby Monitor with Differential Pressure Less than 10 psid (0.69 bar)  
(Monitor located downstream)

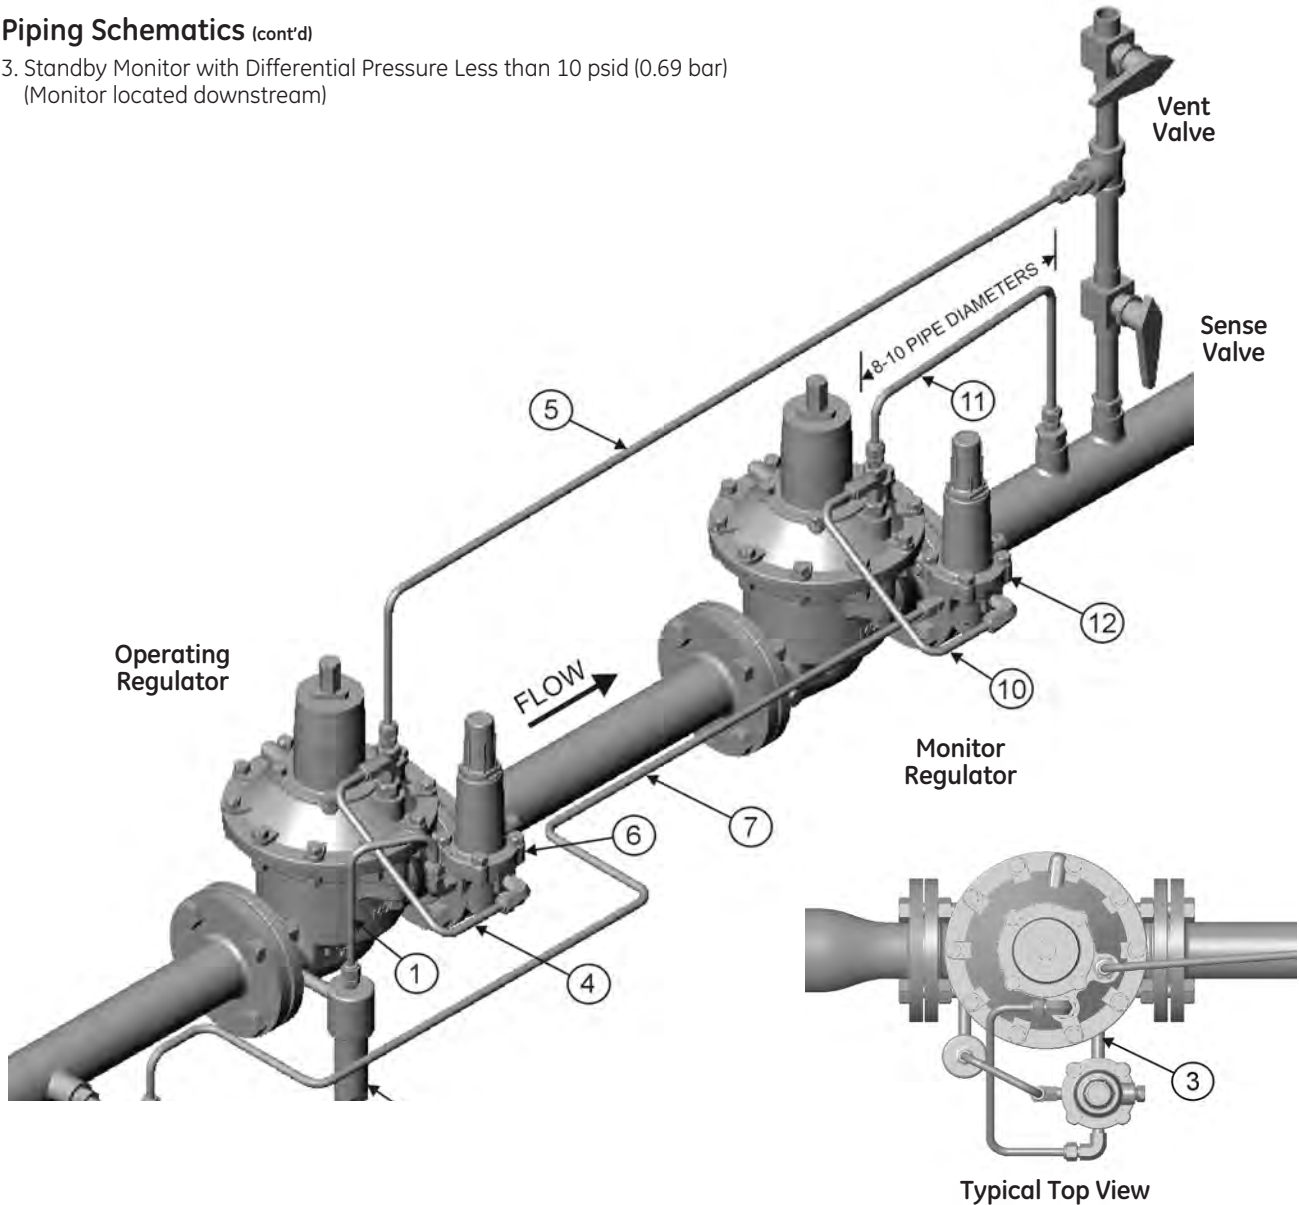

1. Pilot supply tubing from filter OUTLET connection to Series 20 pilot INLET port.
2. Type 30 filter mounted in inlet piping.
3. OUTLET port of Series 20 pilot connected to the loading connection on the actuator housing of the FlowMax regulator.
4. Sense line connecting the SENSE port on the Series 20 pilot to the sense port on the FlowMax actuator. (Refer to Table 3 on Page 5 for sense piping recommendations)
5. Sense line connecting the FlowMax regulator to the downstream piping.
6. Series 20 pilot with pilot cartridge in PRV mode. Pilot LOADING port is plugged.
7. Pilot supply tubing from filter OUTLET connection on the upstream piping connected to Series 20 pilot INLET port.
8. Type 30 filter mounted in the upstream inlet piping.
9. OUTLET port of Series 20 pilot connected to loading connection on the actuator housing of the FlowMax regulator (Same as #3, See typical top view).
10. Sense line connecting SENSE port on Series 20 pilot to sense port on the FlowMax actuator.
11. Sense line connecting the FlowMax actuator to the downstream piping.
12. Series 20 pilot with pilot cartridge in PRV mode. Pilot LOADING port is plugged.

## Piping Schematics (cont'd)


4. Standby Monitor with Differential Pressure Greater than 10 psid (0.69 bar)  
(Monitor located upstream)

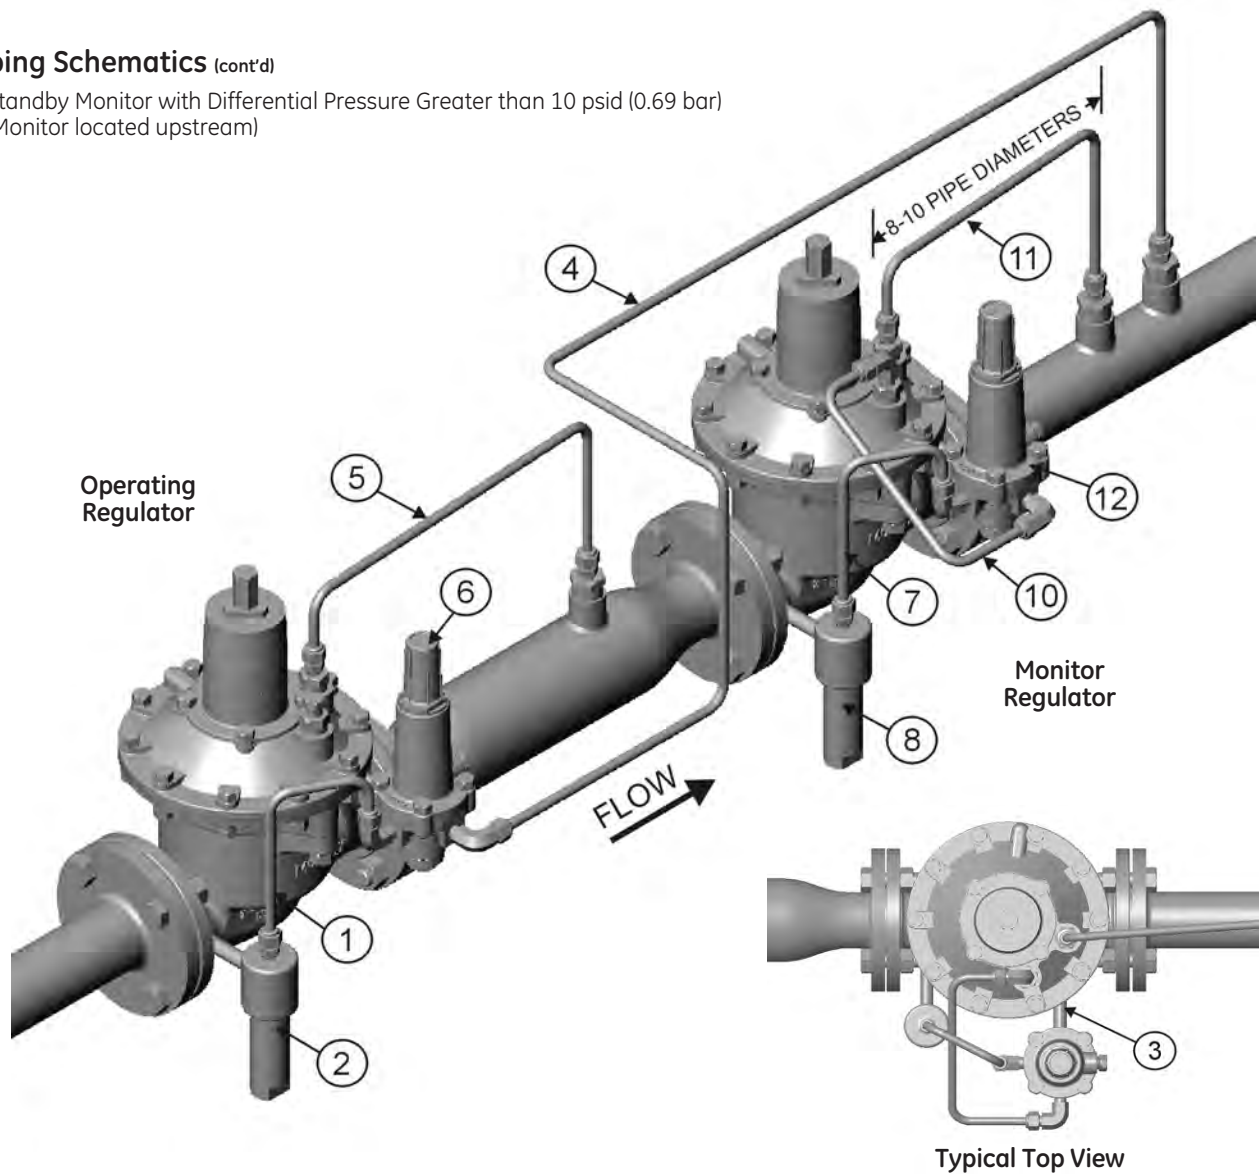

1. Pilot supply tubing from filter OUTLET connection to Series 20 pilot INLET port.
2. Type 30 filter mounted in inlet piping.
3. OUTLET port of Series 20 pilot connected to the Loading connection on the actuator housing of the FlowMax regulator.
4. Sense line connecting the SENSE port on the Series 20 pilot to downstream of the operating regulator. (Refer to Table 3 on Page 5 for sense piping recommendations)
5. Sense line connecting the FlowMax regulator to the interstage piping.
6. Series 20 pilot with pilot cartridge in PRV mode. Pilot LOADING port is plugged.
7. Pilot supply tubing from filter OUTLET connection to Series 20 Pilot INLET port.
8. Type 30 filter mounted in inlet piping.
9. OUTLET port of Series 20 pilot connected to Loading connection on the actuator housing of the FlowMax regulator (Same as #3, See Typical Top View).
10. Sense line connecting SENSE port on Series 20 pilot to sense port on the FlowMax actuator.
11. Sense line connecting the FlowMax actuator to the downstream piping.
12. Series 20 pilot with pilot cartridge in PRV mode. Pilot LOADING port is plugged.

## Piping Schematics (cont'd)

5. Standby Monitor with Differential Pressure Less than 10 psid (0.69 bar)  
(Monitor located upstream)

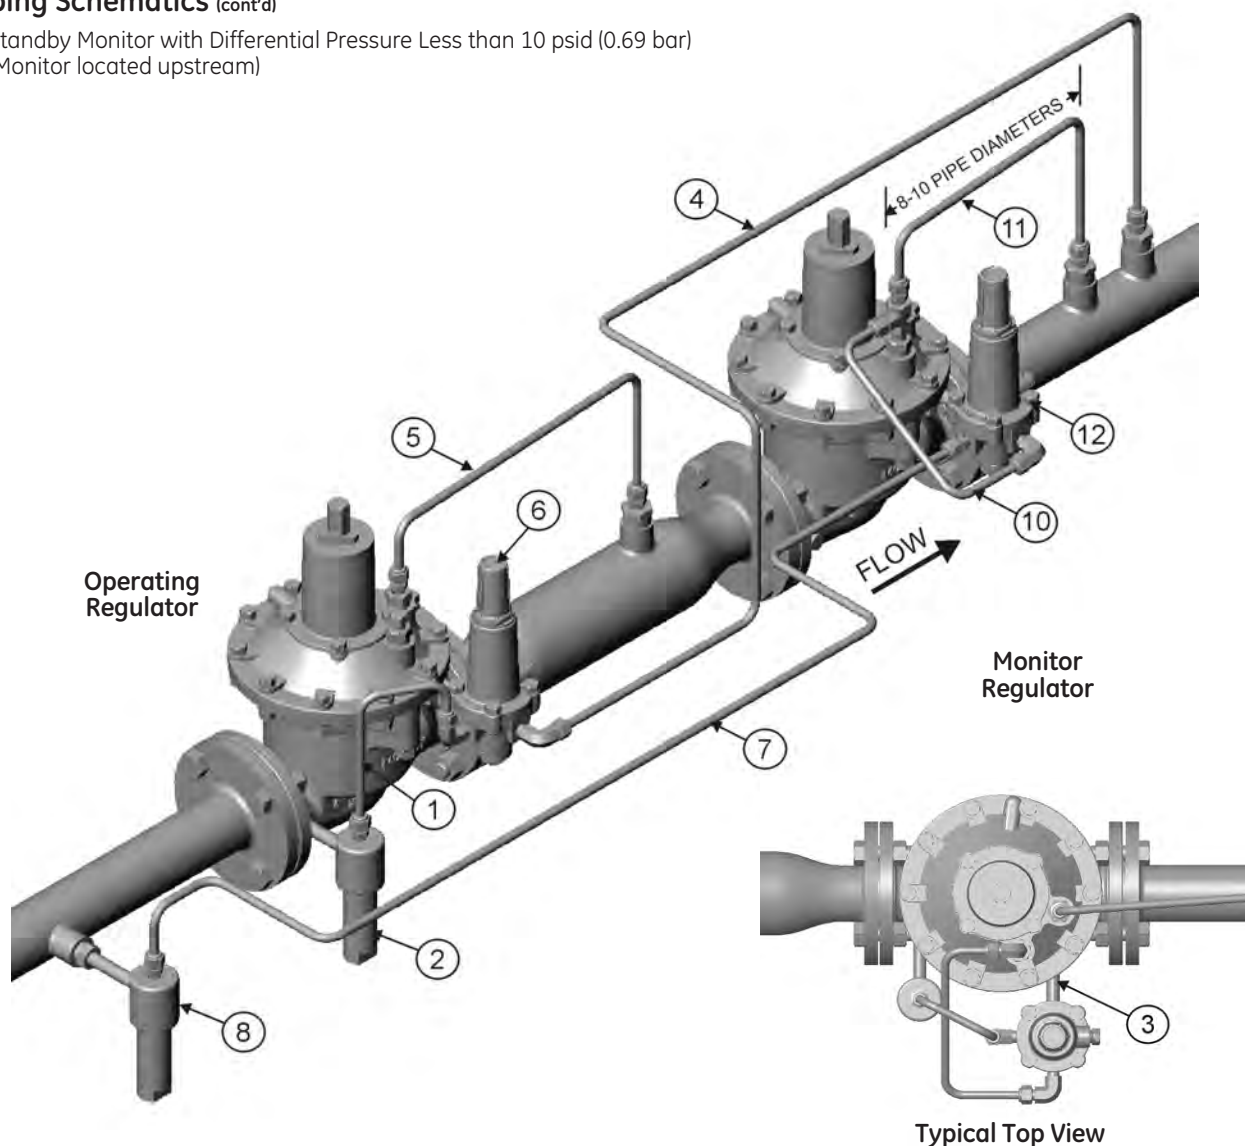


1. Pilot supply tubing from filter OUTLET connection to Series 20 pilot INLET port.
2. Type 30 filter mounted in inlet piping.
3. OUTLET port of Series 20 pilot connected to the loading connection on the actuator housing of the FlowMax regulator.
4. Sense line connecting the Pilot SENSE port to downstream of the operating regulator. (Refer to Table 3 on Page 5 for sense piping recommendations)
5. Sense line connecting the FlowMax regulator to the interstage piping.
6. Series 20 pilot with pilot cartridge in PRV mode. Pilot LOADING port is plugged.
7. Pilot supply tubing from filter OUTLET connection on the upstream piping to pilot INLET port connection.
8. Type 30 filter mounted in inlet piping.
9. OUTLET port of Series 20 pilot connected to loading connection on the actuator housing of the FlowMax regulator (Same as #3, See Typical Top View).
10. Sense line connecting SENSE port on Series 20 pilot to sense port on the FlowMax actuator.
11. Sense line connecting the FlowMax actuator to the downstream piping.
12. Series 20 pilot with pilot cartridge in PRV mode. Pilot LOADING port is plugged.



## Piping Schematics (cont'd)

### 6. Working Monitor Set

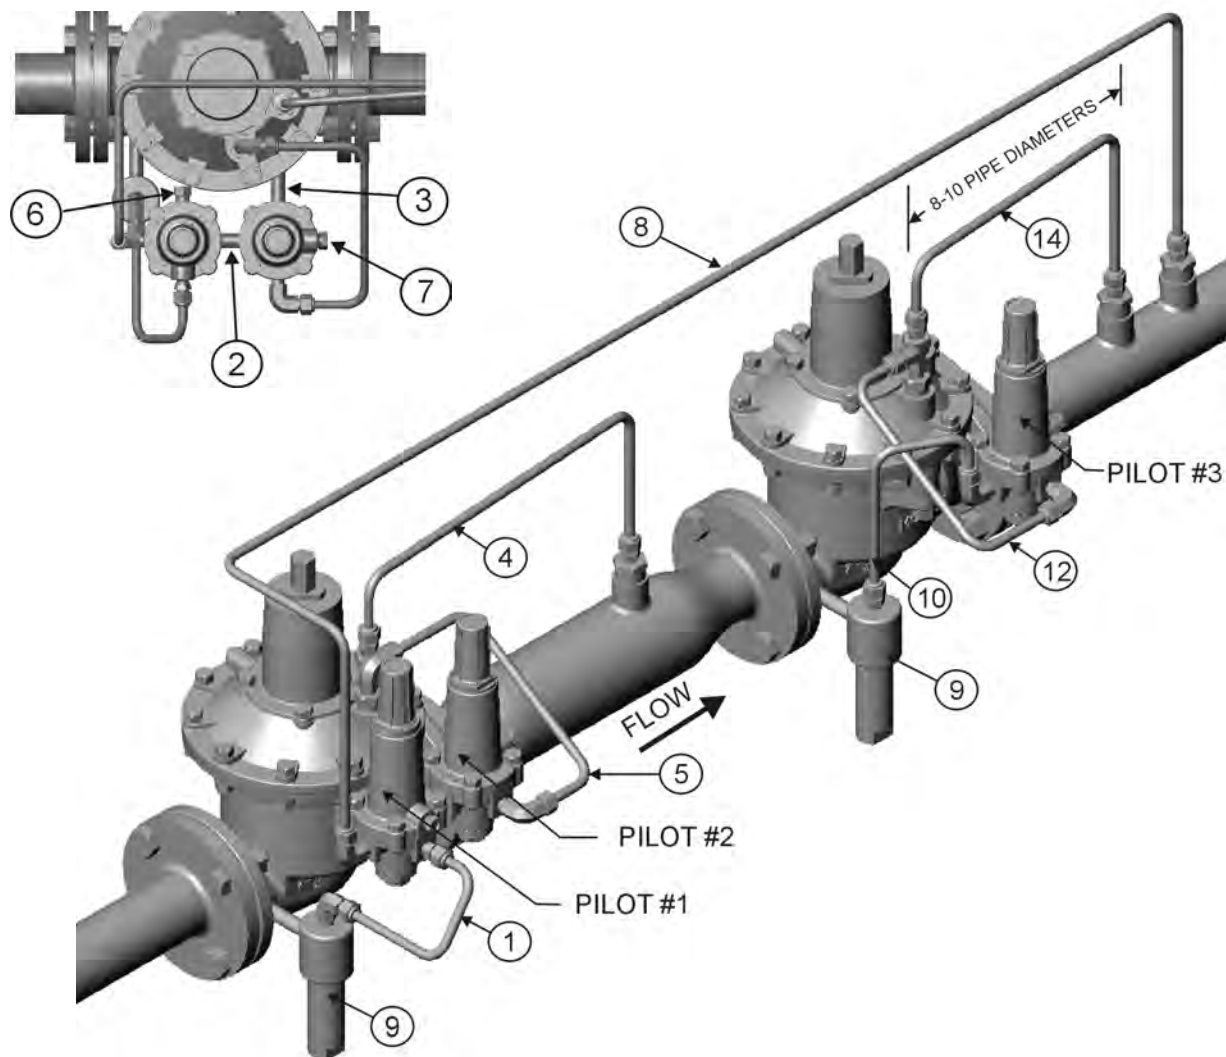

1. Pilot supply tubing from filter OUTLET connection to Series 20 pilot (#1) LOADING port.
2. Pilot #1 OUTLET port connected to pilot #2 INLET port.
3. Pilot #2 OUTLET port connected to the loading connection on the actuator housing of the FlowMax regulator.
4. Sense line connecting the 1st stage FlowMax regulator to the interstage piping. (Refer to Table 3 on Page 5 for sense piping recommendations)
5. Sense line connecting SENSE port on Series 20 pilot (#2) to the sense port on the FlowMax actuator.
6. INLET port on the monitor Series 20 pilot (#1) is plugged.\*
7. LOADING port on the Series 20 pilot (#2) is plugged.\*
8. Sense line connecting the SENSE port on the monitor pilot (#1) to the downstream piping.
9. Type 30 filter mounted in the inlet piping.
10. Pilot supply tubing from filter OUTLET connection to Series 20 pilot (#3) INLET port.
11. LOADING port on the Series 20 pilot (#3) is plugged.
12. Sense line connecting SENSE port on Series 20 pilot (#3) to the sense port on the FlowMax actuator.
13. OUTLET port of Series 20 pilot (#3) connected to the loading connection on the actuator housing of the FlowMax regulator.
14. Sense line connecting the 2nd stage FlowMax regulator to the downstream piping.

NOTE: The INLET and LOADING ports form a common port on the Series 20 pilot

The following procedures are suggested for start up of the FlowMax regulator equipped with Series 20 pilots. Start up of the FlowMax regulator should be made by trained, qualified personnel familiar with high pressure systems and pilot-operated regulators.

The instruction manual for the PILOT(S) being used should be consulted to insure that the installation and start up instructions for the pilot are followed. Some pilots can be damaged if not installed and put into operation correctly.

1. Back off the pilot adjusting screw to fully remove the spring compression.
2. Slowly open the upstream block valve to pressurize the FlowMax regulator and pilot system. The FlowMax regulator should lock up (shut off) with zero pressure downstream.
3. Fully open any hand valve(s) in the control line(s) and the pilot supply line.
4. Slightly open a downstream block valve or open a vent in piping downstream of the FlowMax regulator.
5. Slowly increase the pilot spring setting until the desired downstream pressure is achieved.
6. Slowly close the downstream block valve or vent to check the FlowMax regulator for lockup (shutoff).
7. Slowly open the downstream block valve to allow full flow.

[illegible]

This procedure is based on the first regulator being the Operating regulator and the second regulator being the Monitor regulator.

1. If necessary, purge any pressure in the station.
2. Set operating regulator pilot (#1) spring at the MAXIMUM setting. The sense line shut-off valve should be closed and the sense line vent valve should be open.
3. Set monitor pilot (#2) spring to the MINIMUM (zero) setting.
4. Slowly open the inlet block valve. Full inlet pressure should be present at the monitor regulator and the Monitor regulator should be closed.
5. Open any hand valve(s) in the pilot supply lines on both regulators. The sense line shut-off valve should remain closed and the sense line vent valve should remain open (Refer to page 8).
6. Open a vent or downstream block valve.
7. Increase the pilot spring setting of the monitor regulator until the desired monitor override setting is reached. Lock in the pilot setting.
8. With some flow going through the station, close the vent valve on the operating regulator sense line and open the shut-off valve on the same line. Start to lower the Pilot setting of the operating regulator until the desired outlet pressure is achieved.

## Checking Standby Monitor Operation

- © 2016 General Electric Company. All rights reserved.






## Start and Operation (cont'd)

### Working Monitor

1. Purge any pressure in the station.
2. Set pilots #1 and #2 to a setting above the desired set points.
3. Set the pilot (#3) at a zero setting.
4. Slowly open the inlet block valve to station. The second stage regulator should remain closed as a result of the pilot #3 being set to zero.
5. Fully open any hand valve(s) in the control line(s) and the pilot supply line.
6. Open an outlet block valve or vent to allow flow through the station.
7. Increase the setting of the second stage regulator, pilot (#3) to the desired monitor over-ride pressure set point of the station.
8. Lower the setpoint of the first stage regulator pilot (#2) to the desired interstage pressure setting. The first stage regulator should begin to control the interstage pressure at the setpoint of Pilot #2.
9. Lower the setpoint of pilot #1 to take control of the system (a pressure that will be slightly lower than the final monitor over-ride pressure).
10. Raise the setpoint of pilot #3 to a maximum setting.
11. Raise the setpoint of pilot #1 to maintain the exact monitor over-ride pressure set point.
12. Lower pilot #3 to the desired station outlet pressure.

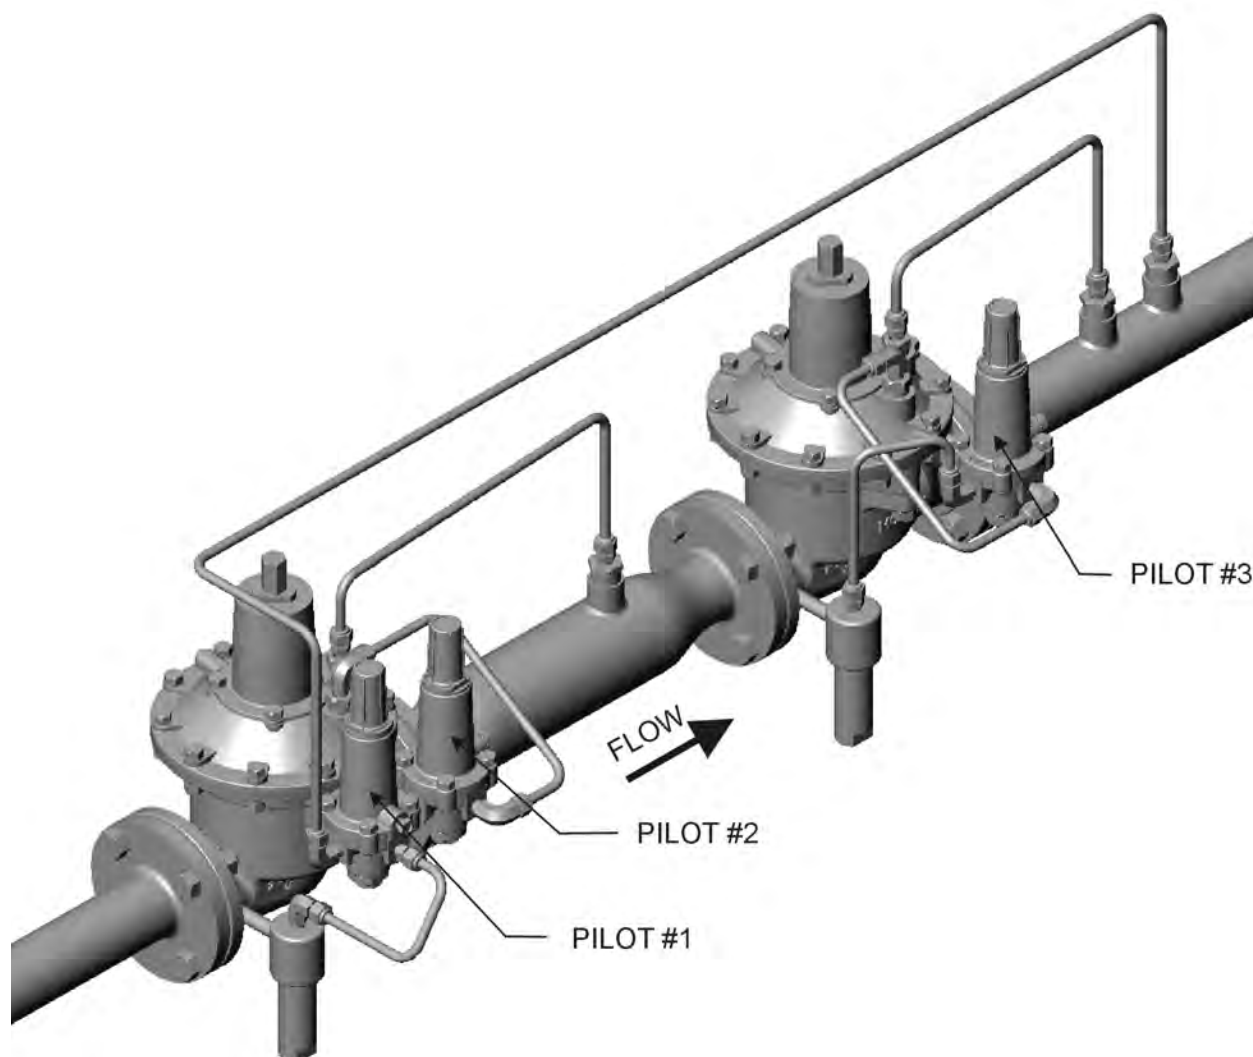

## Maintenance

### WARNING

**Installation and testing of the FlowMax regulator should be made by trained, qualified personnel familiar with high-pressure piping and regulators.**

Regulator parts are subject to normal wear and must be inspected and replaced as necessary. The frequency of inspection and replacement of parts depends on severity of service conditions or the requirements of local, state, and federal regulations. Be certain that the nameplates are updated to accurately indicate any field changes in equipment, materials, service conditions, or pressure settings.

**NOTE: The regulator and actuator have been designed to facilitate the maintenance of the major wear components without the need to completely disassemble the actuator.**

### WARNING

**Before disassembly make sure the regulator has been isolated from the process by closing block valves on the inlet and outlet sides of the regulator. Safely release pressure and process fluid from the system. Failure to complete these steps can result in personal injury and property damage.**

#### Partial Disassembly for Stem/Plug/Seat Inspection

1. Disconnect actuator control/sense and pilot supply lines to the actuator.



Figure 5 - FlowMax with tubing removed

2. Loosen and remove the cap screws securing the actuator housing and remove the actuator from the body by lifting straight up. **DO NOT PRY.**

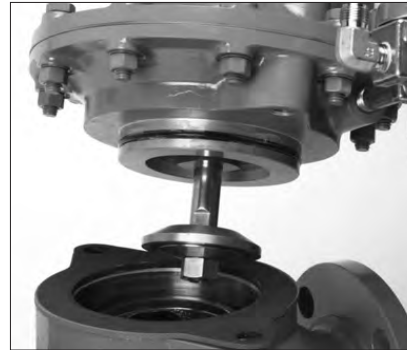


Figure 6 - Remove actuator from regulator body

3. Remove the cage, seat, seat o-ring and body gasket. **NOTE: The 6" FlowMax does not have a body gasket.** Inspect the seat for damage. If any nicks, scratches, or other damage is present on the sealing surface (knife edge), the Seat must be replaced.



Figure 7a - Remove cage, seat, and o-ring

## Maintenance (cont'd)

### 6" FlowMax Only

- There is no body gasket in the 6" design. The cage needs to be unscrewed for removal. The housing o-ring should be removed and inspected.



Figure 7b - 6" FlowMax: remove cage & inspect housing o-ring

- Remove the lower stem nut and remove the plug assembly.

**NOTE: When removing or tightening the stem nut, use a wrench on the stem flats to prevent the stem from rotating and damaging the main actuator diaphragm.**

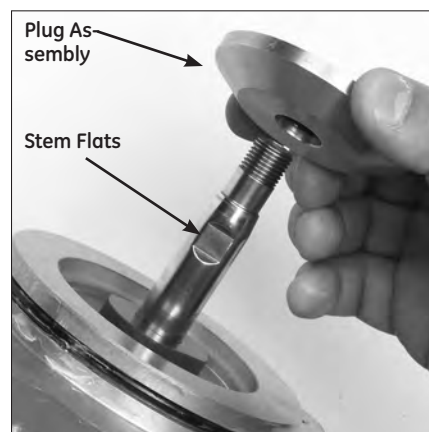


Figure 8 - Removing plug assembly from actuator stem

- Inspect the plug seal and plug o-ring for damage or wear. If damaged, the plug seal may be turned over or replaced.

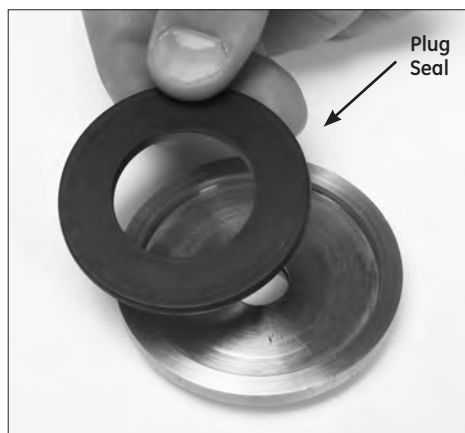


Figure 9 - Inspecting the plug seal

- Remove the stem bushing from the bottom of the lower actuator housing. Use caution to not damage the sealing surface of the stem.



Figure 10 - Removing the stem bushing

- Inspect the stem o-ring in the internal groove of the bushing for wear and/or damage. Reinstall stem bushing snug tight. Do not over torque.

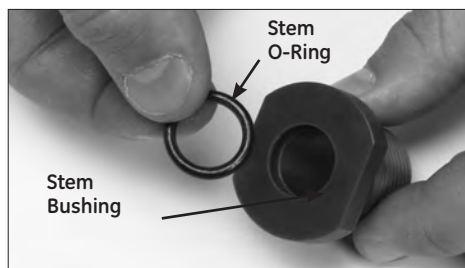


Figure 11 - Inspecting the stem o-ring

## Maintenance (cont'd)

### Partial Assembly for Stem/Plug/Seat Inspection

**NOTE: Lightly lube o-rings before installation.**

1. If the o-rings have been removed, reinstall the bushing o-ring and the stem o-ring.
2. Screw the stem bushing into the bottom side of the lower actuator housing until the bushing flange has bottomed on the housing. **Do not over tighten.**
3. Install a new o-ring in the internal plug groove. be removed and inspected.

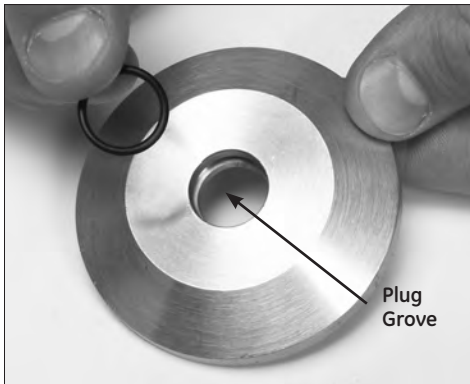


Figure 12 - Inspecting the plug o-ring

4. Install the plug onto the tapered end of the stem with the plug seal facing away from the actuator.
5. Screw the stem nut on the bottom of the stem with the rubber seal toward the plug to lock the plug assembly in place. **Use a wrench to hold the stem while tightening the stem nut.**



Figure 13 - Hold the stem while tightening the stem nut

6. Ensure that the seat bore in the body is clean and install the seat o-ring and seat into the bore in the body. Make sure that the chamfered edge of the seat is resting against the seat o-ring and that the knife-edge sealing surface is facing up.

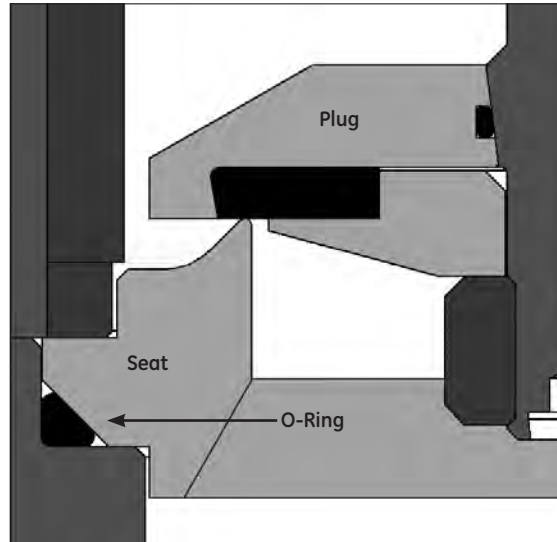


Figure 14 - Proper seat orientation

7. Install the cage onto the seat. The cage should fit snugly over the raised lip on the seat. **Do not damage the seat sealing surface when installing the cage.**
8. Install the body gasket (2", 3" & 4" models). The 6" FlowMax does not utilize a body gasket.

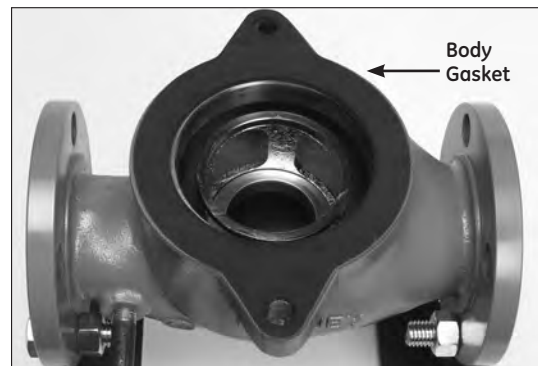


Figure 15 - Installing the body gasket

9. Line up the mounting holes in the body with those in the lower actuator housing, and make sure that the loading port in the lower actuator housing is facing towards the front of the regulator. Apply a light coating of lubricant to the housing o-ring and lower the actuator assembly onto the body. **Use caution not to pinch the housing o-ring during installation.**

## Maintenance (cont'd)

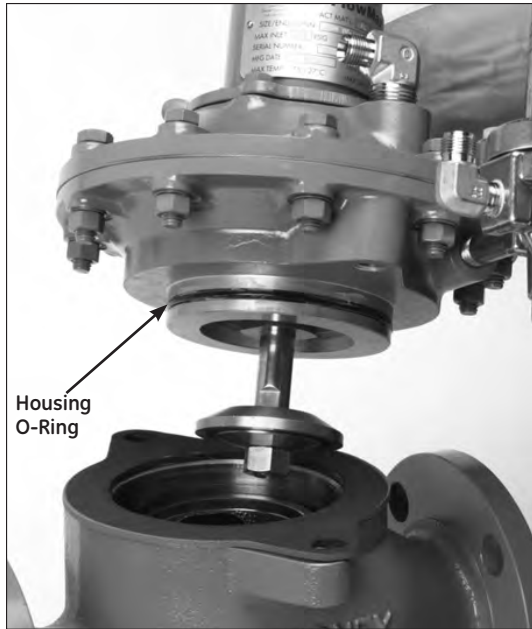


Figure 16 - Installing the main actuator

10. Incrementally tighten the body cap screws to specified torque values. Table 4 Page 26.

### 2", 3" & 4" FlowMax Only

**NOTE:** The gap between the actuator and body should be approx. 1/16 in (1.59 mm).

### 6" FlowMax Only

**NOTE:** The 6" FlowMax does not utilize a body gasket. There should be no gap between the actuator and body.



Figure 17 - Tightening the body cap screws

11. Reconnect control/sense and pilot supply lines to the actuator.

## Partial Disassembly for Balancing Diaphragm Inspection

1. Disconnect control/sense and pilot supply lines to the actuator.
2. Loosen the spring case cap and remove the main spring.



Figure 18 - Removing the main spring

3. Remove the spring case bolts, the spring case, and the spring case o-ring.

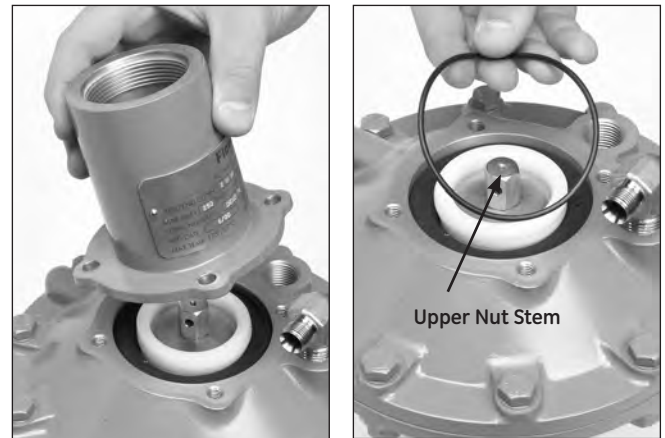


Figure 19 - Removing the spring case

4. Remove the cap screws securing the actuator housing and remove the actuator from the regulator body by lifting straight up. **DO NOT PRY.**
5. Remove the upper stem nut located on top of the Piston. **When removing the upper stem nut, hold the stem with a wrench at the stem flats near the plug assembly. Failure to do so may cause damage to the main actuator diaphragm.** Remove and inspect the piston, washer, and balancing diaphragm. Inspect the piston ring and balancing diaphragm for signs of wear and damage. Replace as necessary.



## Maintenance (cont'd)

### Partial Assembly for Balancing Diaphragm Inspection

1. Install the balancing diaphragm onto the balancing diaphragm retainer. Ensure that the diaphragm flange is facing up. Once installed, the top diaphragm flange should be pushed down flush with the counter bore surface of the upper actuator housing.

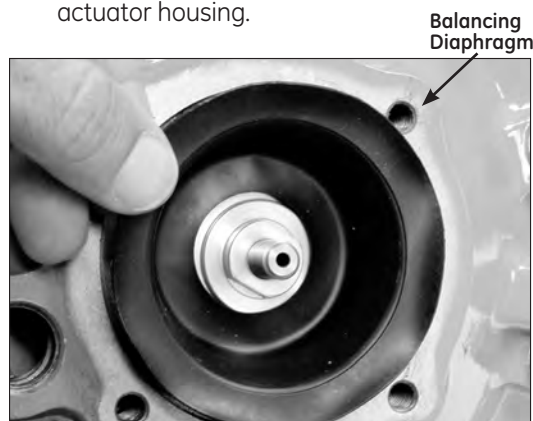


Figure 20 - Replacing the balancing diaphragm

2. Install the piston ring onto the piston.

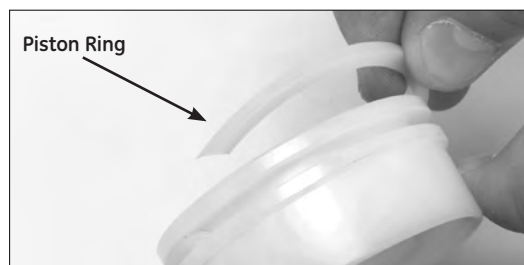


Figure 21 - Installing piston ring on piston

3. Install the piston onto the stem with the piston ring and counter bore up. The bottom end of the piston should fit over the balancing diaphragm and hold it in place over the balancing diaphragm retainer. NOTE: 3" -6" FlowMax regulators utilize a nut to hold the balancing diaphragm retainer in place.

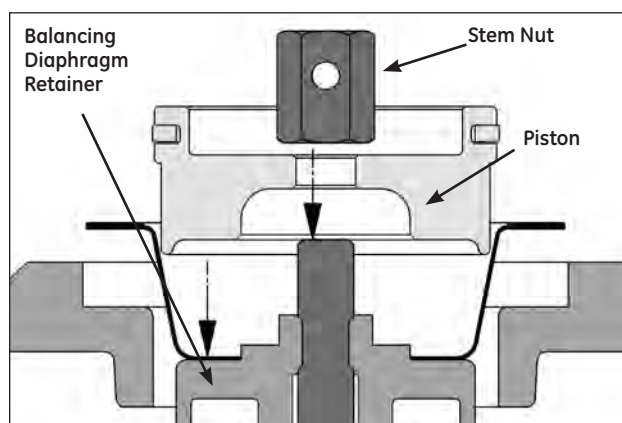


Figure 22a - Installing piston over balancing diaphragm

4. Install the washer in the piston counter bore and install the upper stem nut. **Use a wrench to hold the stem while tightening the upper stem nut.**

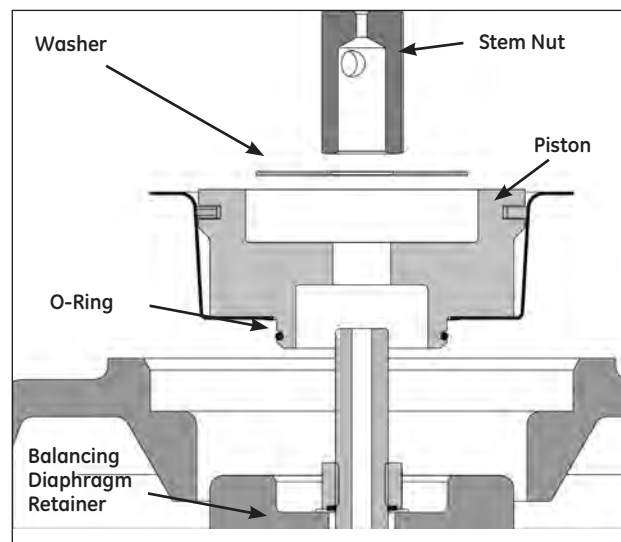


Figure 22b - 3" -6" FlowMax only: Installing piston and balancing diaphragm

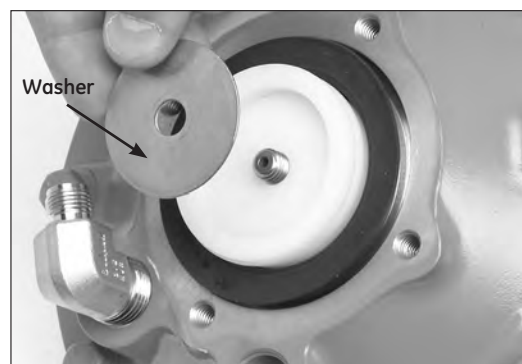


Figure 23 - Installing the washer in the piston counter bore

- 5a. 2" FlowMax only: Place the balancing diaphragm o-ring into the counter bore in the upper actuator housing and install the spring case onto the housing. The o-ring can be lightly stretched for ease of assembly.

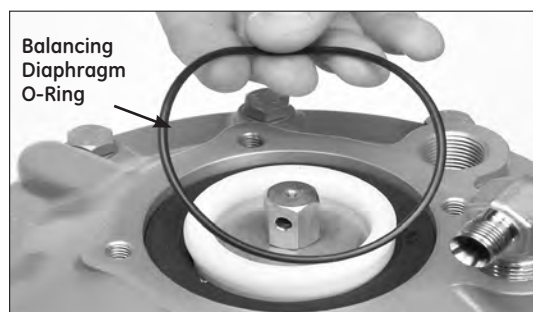


Figure 24a - Installing the balancing diaphragm o-ring on the 2" FlowMax regulator


## Maintenance (cont'd)

- 5b. **3", 4" & 6" FlowMax only:** Lubricate and install the balancing diaphragm o-ring into the spring case groove. Place the spring case onto the housing and install cap screws to the proper torque (refer to Table 4, page 26).




**Figure 24b** - Installing the balancing diaphragm o-ring on the 3", 4" & 6" FlowMax

6. Insert the main spring into the piston counterbore and install the spring case cap.  
**NOTE:** The 6" FlowMax has an additional washer between the spring and spring case cap.

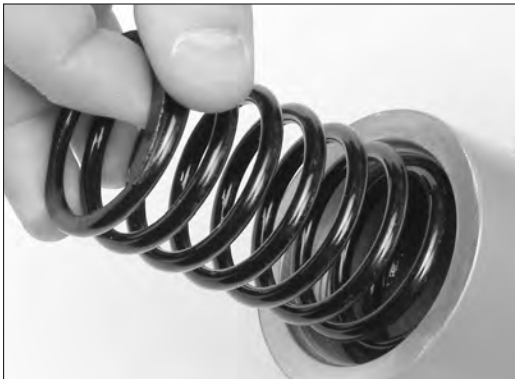

**Figure 25** - Installing the main spring

7. Lightly coat the housing o-ring with lubricant and install the body gasket. The 6" FlowMax does not utilize a body gasket, the housing o-ring on a 6" FlowMax is machined into the regulator body.

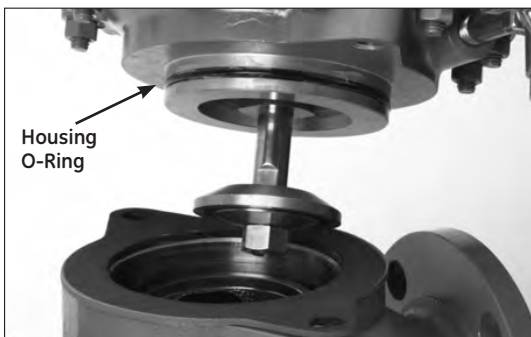

**Figure 26** - Installing the actuator on the body

8. Line up the mounting holes for the body with those in the lower actuator housing, and make sure that the Loading port in the lower actuator housing is facing toward the front side of the regulator.
9. Lower the actuator assembly onto the regulator body.  
**Use caution not to pinch the housing o-ring during installation.**
10. Incrementally tighten the body cap screws to specified torque values. Table 4 Page 27.



**Figure 27** - Tightening the body cap screws

### 2", 3" & 4" FlowMax Only

**NOTE:** The gap between the actuator and body should be approx. 1/16 in (1.59 mm).

### 6" FlowMax Only

**NOTE:** The 6" FlowMax does not utilize a body gasket. There should be no gap between the actuator and body.

11. Reconnect control/sense and pilot supply lines to the actuator.

### Disassembly for Main Diaphragm Inspection

1. Disconnect control/sense and pilot supply lines to the actuator.
2. Loosen and remove the cap screws securing the actuator housing and remove the actuator from the body by lifting straight up. **DO NOT PRY.**



**Figure 28** - Removing the main actuator



## Maintenance (cont'd)

3. Remove the spring case cap and remove the main spring.
4. Remove the spring case capscrews and remove the spring case.
5. Remove the upper stem nut and remove the Piston from the stem. Remove the balancing diaphragm. **Use a wrench to hold the stem while loosening the stem nut.**
6. Remove the housing cap screws and remove the upper actuator housing.



Figure 29 - Removing the housing cap screws

7. Remove the balancing diaphragm retainer. Use a wrench to hold the stem while loosening the retainer. The 2" inch FlowMax retainer is threaded and attached directly to the stem. The 3" - 6" FlowMax regulators utilize a nut and washer to hold the retainer in place.

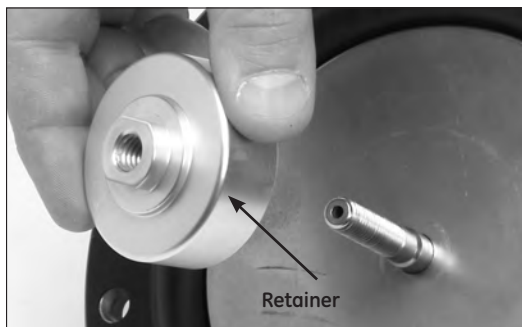


Figure 30 - Removing the balancing diaphragm retainer

8. Remove the upper diaphragm retainer and the main diaphragm. Inspect the main diaphragm for any damage.
9. Inspect the main diaphragm stem o-rings in the upper and lower retainers for damage and replace if necessary.



Figure 31 - Fig. 31 Inspecting stem o-ring

## Assembly of Main Diaphragm

1. Install the main diaphragm stem o-ring into the internal groove of the lower diaphragm retainer with the stem still in place in the lower actuator housing. The groove should be facing up. Install the retainer on the stem.

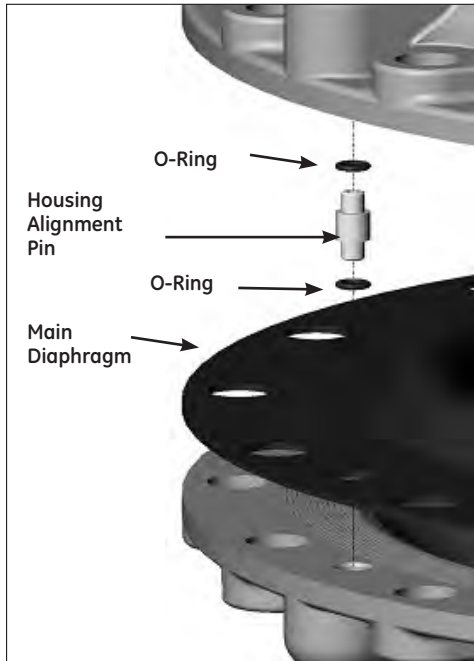


Figure 32 - Installing lower diaphragm retainer

2. The main diaphragm is a top hat design and should be installed with the large flange down. Install the main diaphragm on the stem until it is bottomed on the lower diaphragm retainer.
3. Install the upper diaphragm retainer over the threaded end of the stem so it is resting on the top side of the main diaphragm.

## Maintenance (cont'd)

4. Install the balancing diaphragm retainer o-ring side down, over the stem and tighten. **Use a wrench to hold the stem while tightening the retainer.** The 2" inch FlowMax retainer is threaded and attached directly to the stem. The 3" - 6" FlowMax regulators utilize a nut and washer to hold the retainer in place.
5. Align the small hole on the main diaphragm flange with the alignment pin in the lower actuator housing and bottom the diaphragm on the housing flange.



**Figure 33.** - The housing alignment pin assembly for FlowMax actuator assemblies

6. Install the upper housing onto the lower housing and diaphragm. Ensure that the alignment pin engages the alignment hole in the upper housing.
7. To hold the assembly in place, install at least two of the housing cap screws on opposite sides of the housing and tighten finger tight.
8. Move the stem assembly through full stroke. The stem should move freely.




**Figure 34** - Checking stem for free movement

9. Install and tighten the remaining actuator bolts per the torque recommendation (Table 4, Page 26).



**Figure 35** - Install the remaining actuator cap screws

10. Install the balancing diaphragm onto the Balancing diaphragm Retainer. Ensure that the diaphragm flange is facing up. Once installed, the diaphragm flange will need to be pushed down so that it is flush with counter bore surface of the upper actuator housing.

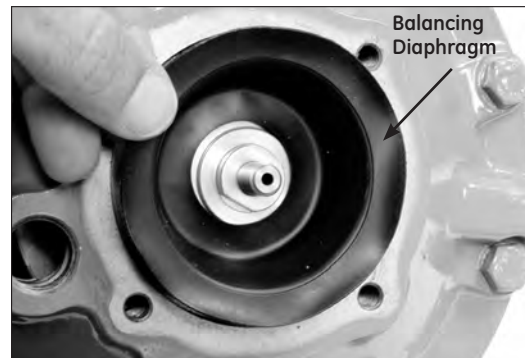

**Figure 36** - Replacing the balancing diaphragm

11. Install the piston ring onto the piston.



**Figure 37** - Installing piston ring on piston

## Maintenance (cont'd)

12. Install the piston onto the stem with the piston ring and counter bore up. The bottom end of the piston should fit over the balancing diaphragm and hold it in place over the balancing diaphragm Retainer.  
NOTE: 3" -6" FlowMax regulators utilize a nut to hold the balancing diaphragm retainer in place.

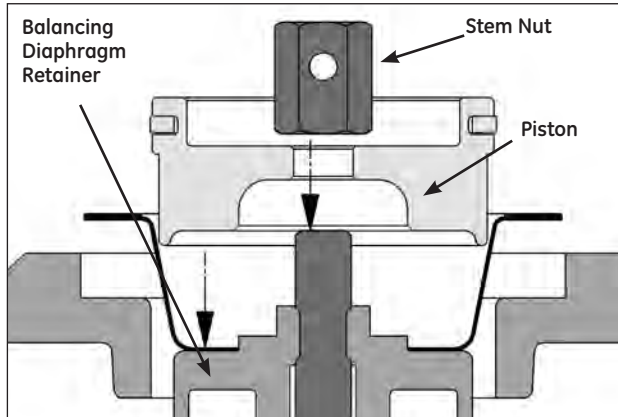


Figure 38a - Installing piston over balancing diaphragm

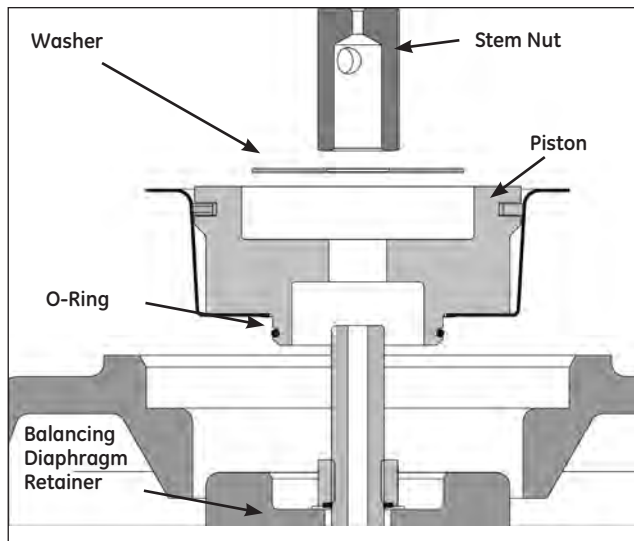


Figure 38b - 3"-6" FlowMax only: Installing piston and balancing diaphragm

13. Install the washer in the piston counter bore and install the upper stem nut. **Use a wrench to hold the stem while tightening the upper stem nut.**

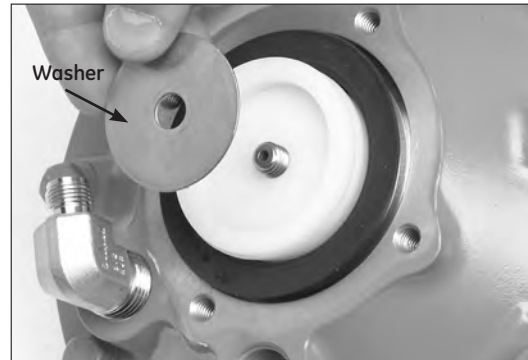


Figure 39 - Installing the washer in the piston counter bore

- 14a. **2" FlowMax only:** Place the balancing diaphragm o-ring into the counter bore in the upper actuator Housing and install the spring case onto the housing. The o-ring can be lightly stretched for ease of assembly.

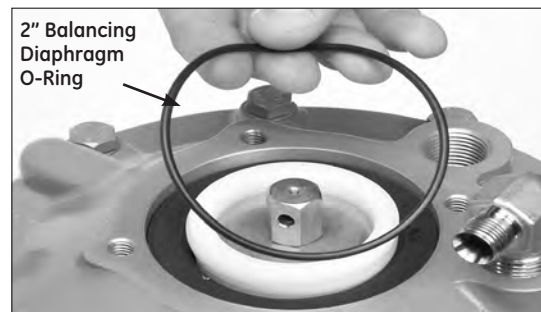


Figure 40a - Installing the balancing diaphragm o-ring on the 2" FlowMax


- 14b. **3", 4" & 6" FlowMax only:** Lubricate and install the balancing diaphragm o-ring into the spring case groove. Place the spring case onto the housing and install cap screws to the proper torque (refer to Table 4, page 27).



Figure 40b - Installing the balancing diaphragm o-ring on the 3", 4" & 6" FlowMax

## Maintenance (cont'd)

6. Insert the main spring into the piston counterbore and install the spring case cap. **NOTE:** The 6" FlowMax has an additional washer between the spring and spring case cap.

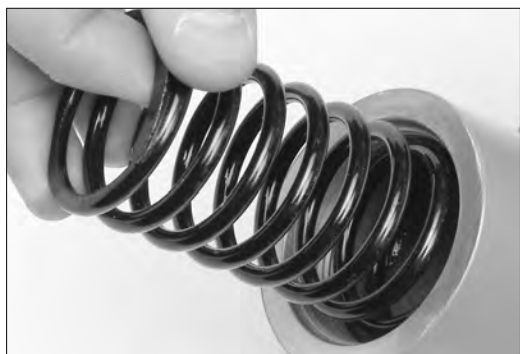

**Figure 41 - Installing the main spring**

16. Lightly coat the housing o-ring with lubricant and install the body gasket. The 6" FlowMax does not utilize a body gasket, the housing o-ring on a 6" FlowMax is machined into the regulator body.



**Figure 42 - Installing the actuator on the body**

17. Line up the mounting holes for the body with those in the lower actuator housing, and make sure that the loading port in the lower actuator housing is facing toward the front side of the regulator.
18. Inspect, clean, and install the seat o-ring, seat and cage into the body.
19. Incrementally tighten the body cap screws to specified torque values. Table 4 Page 26.



**Figure 43 - Tightening the body cap screws**

**2", 3" & 4" FlowMax Only**

**NOTE:** The gap between the actuator and body should be approx. 1/16 in (1.59 mm).

### 6" FlowMax Only

**NOTE:** The 6" FlowMax does not utilize a body gasket. There should be no gap between the actuator and body.

20. Reconnect control/sense and pilot supply lines to the actuator.

NOTES:

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.



## Maintenance (cont'd)

### Travel Indicator Kit Installation (Optional)

An optional travel indicator kit is available for the FlowMax regulator. Contained in the kit is an indicator stem, indicator stem o-ring, indicator stem o-ring retainer, spring case cap, indicator cover o-ring, and Indicator cover. The following outlines the installation procedures for the kit. A pre-drilled and tapped stem nut currently exists as part of the FlowMax regulator and is not included in the kit.



Figure 44 - Travel indicator kit

1. Remove the existing spring case cap and spring. Place a small amount of thread locking compound on the indicator stem threads. Finger tighten the indicator stem into the stem nut until bottomed. **Use caution to not damage the indicator stem sealing surface.**

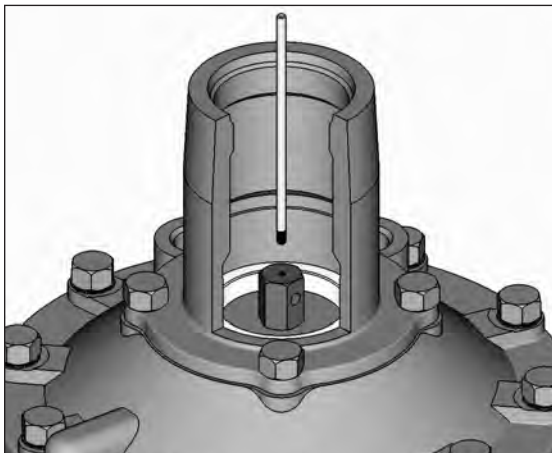


Figure 45 - Installing the indicator stem into the stem nut

2. Lubricate and insert the indicator stem o-ring into the small counterbore in the bottom of the new spring case cap.

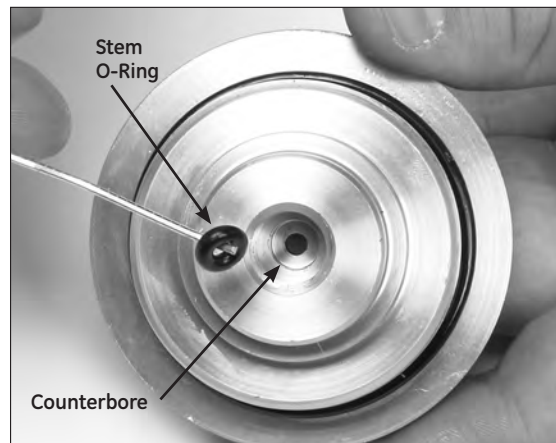


Figure 46 - Installing the indicator stem o-ring

3. Install the threaded indicator o-ring retainer into the spring case cap until bottomed. **Check to ensure the indicator stem o-ring is installed correctly and there is a visible hole through the cap.**

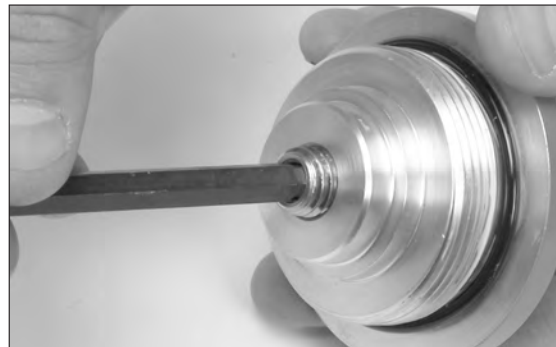


Figure 47 - Installing the o-ring retainer

4. Reinstall the main spring. Install the spring case cap o-ring and lightly lubricate the o-ring and threads. Thread the spring case cap onto the spring case until bottomed. **NOTE:** The 6" FlowMax has an additional washer between the spring and spring case cap.



Figure 48 - Installing the spring case cap

## Maintenance (cont'd)

5. Install the o-ring onto the indicator cover. Lightly lubricate the o-ring and threads. Screw the indicator cover into the spring case cap until bottomed.



Figure 49 - Installing the indicator cover

### Installation of Reduced Capacity Trim

1. Disconnect the actuator control/sense and the pilot supply tubing.
2. Remove the cap screws securing the actuator housing and remove the actuator from the body by lifting straight up. **DO NOT PRY.**



Figure 50 - Remove the actuator housing assembly

3. Remove the stem nut. Use a wrench to hold the stem while loosening the stem nut.



Figure 51 - Remove the stem nut

4. Replace the plug retainer with the reduced capacity plug retainer.

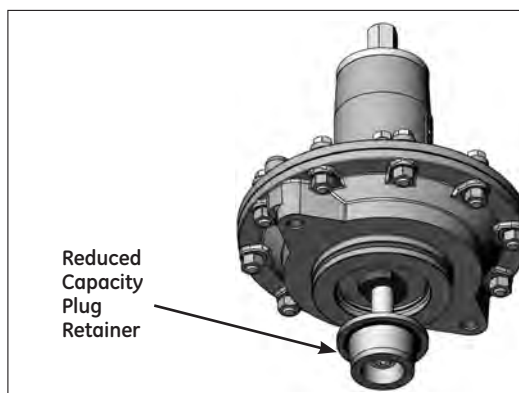


Figure 52 - Location of the reduced capacity plug retainer

5. Use a socket wrench to tighten the stem nut back onto stem. Use a wrench to hold the stem while tightening the stem nut.
6. Reassembly the actuator onto the regulator body. Refer to steps 8-11 on pages 17 & 18.

### Cleaning

1. **DO NOT** clean o-ring grooves with sharp metal tools. The bottom of the grooves must have a smooth finish to prevent leakage. The mating surface of adjacent parts must also be smooth to prevent leakage.

Table 4 - FlowMax Bolting Torques

FlowMax Bolting Torques Lb-Ft (n-m)				
	2"	3"	4"	6"
2" Housing Cap Screws	6-7 (8-9)	10-12 (14-16)	10-12 (14-16)	15-16 (20-22)
Stem Nut	7-8 (9-11)	8-10 (11-14)	10-12 (14-16)	10-12 (14-16)
Spring Case	5-6 (7-8)	6-7 (8-9)	6-7 (8-9)	8-10 (11-14)
Plug Nut	7-10 (9-14)	7-10 (9-14)	7-10 (9-14)	7-10 (9-14)
Body Cap Screws	12-16 (16-22)	12-16 (16-22)	12-16 (16-22)	16-20 (22-27)

## Troubleshooting

Problem	Solution
The regulator will not shut-off	<ol style="list-style-type: none"> <li>1. Verify the clearance between the actuator and body is even</li> <li>2. Check actuator to body bolts - tighten if necessary</li> <li>3. Check the pilot for excess friction ("sticking open")</li> <li>4. Check main spring</li> <li>5. Check the plug seal for damage</li> <li>6. Check the seat for any nicks or damage to the sealing surface</li> <li>7. Check for damage to the seat o-ring</li> <li>8. Check for obstructions in the stem hole</li> <li>9. Check for failure of the balancing diaphragm</li> <li>10. Check for blockage of the internal restrictor</li> </ol>
Regulator will not open	<ol style="list-style-type: none"> <li>1. Check if any valves in the sense line are not fully open</li> <li>2. Check the pilot set point</li> <li>3. Check that existing piping matches the piping schematics</li> <li>4. Check for binding</li> <li>5. Check the main diaphragm for damage</li> </ol>
Erratic Behavior	<ol style="list-style-type: none"> <li>1. Check the location of the sense line (away from pipes, fittings, and other turbulent locations)</li> <li>2. Check that the size of the sense line is adequate (refer to recommendations on page 5)</li> <li>3. Check if any valves in the sense line are not fully open</li> <li>4. Check the pilot for excess friction ("sticking")</li> <li>5. Check for excess friction in the actuator</li> </ol>



## Limited Warranty

Seller warrants that Products shall be delivered free from defects in material, workmanship and title and that Services shall be performed in a competent, diligent manner in accordance with any mutually agreed specifications. The warranty for Products shall expire one (1) year from first use or eighteen (18) months from delivery, whichever occurs first, except that software is warranted for ninety (90) days from delivery. The warranty for Services shall expire one (1) year after performance of the Service, except that software-related Services are warranted for ninety (90) days. If Products or Services do not meet the above warranties, Buyer shall promptly notify Seller in writing prior to expiration of the warranty period. Seller shall (i) at its option, repair or replace defective Products and (ii) re-perform defective Services. If despite Seller's reasonable efforts, a non-conforming Product cannot be repaired or replaced, or non-conforming Services cannot be re-performed, Seller shall refund or credit monies paid by Buyer for such non-conforming Products and Services. Warranty repair, replacement or re-performance by Seller shall not extend or renew the applicable warranty period. Buyer shall obtain Seller's agreement on the specifications of any tests it plans to conduct to determine whether a non-conformance exists. Buyer shall bear the costs of access for Seller's remedial warranty efforts (including removal and replacement of systems, structures or other parts of Buyer's facility), de-installation, decontamination, re-installation and transportation of defective Products to Seller and back to Buyer. The warranties and remedies are conditioned upon (a) proper storage, installation, use, operation, and maintenance of Products, (b) Buyer keeping accurate and complete records of operation and maintenance during the warranty period and providing Seller access to those records, and (c) modification or repair of Products or Services only as authorized by Seller in writing. Failure to meet any such conditions renders the warranty null and void. Seller is not responsible for normal wear and tear. This Article 5 provides the exclusive remedies for all claims based on failure of or defect in Products or Services, regardless of when the failure or defect arises, and whether a claim, however described, is based on contract, warranty, indemnity, tort/extra-contractual liability (including negligence), strict liability or otherwise. The warranties provided in this Article 5 are exclusive and are in lieu of all other warranties, conditions and guarantees whether written, oral, implied or statutory. NO IMPLIED OR STATUTORY WARRANTY, OR WARRANTY OR CONDITION OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE APPLIES.

## Product Support

Local support is available through our manufactures representative and distributor network.

Contact the factory:

GE Oil & Gas

12970 Normandy Boulevard

Jacksonville, FL 32221

Tel. +1-904-570-3409

or refer to our web site for your support representative contact information. Factory support is available from 8:00 AM to 4:30 PM MST Monday through Friday. Limited after hours support is also available. Complete product specifications, parts lists, and flow calculation software is available on our web site [www.geoilandgas.com/valves](http://www.geoilandgas.com/valves).



# DIRECT SALES OFFICE LOCATIONS

## AUSTRALIA

Brisbane:  
Phone: +61-7-3001-4319  
Fax: +61-7-3001-4399

Perth:  
Phone: +61-8-6595-7018  
Fax: +61-8-6595-7299

Melbourne:  
Phone: +61-3-8807-6002  
Fax: +61-3-8807-6577

## BELGIUM

Phone: +32-2-344-0970  
Fax: +32-2-344-1123

## BRAZIL

Phone: +55-19-2104-6900

CHINA  
Phone: +86-10-5689-3600  
Fax: +86-10-5689-3800

## FRANCE

Courbevoie  
Phone: +33-1-4904-9000  
Fax: +33-1-4904-9010

## GERMANY

Ratingen  
Phone: +49-2102-108-0  
Fax: +49-2102-108-111

## INDIA

Mumbai  
Phone: +91-22-8354790  
Fax: +91-22-8354791

## New Delhi

Phone: +91-11-2-6164175  
Fax: +91-11-5-1659635

## ITALY

Phone: +39-081-7892-111  
Fax: +39-081-7892-208

## JAPAN

Tokyo  
Phone: +81-03-6871-9008  
Fax: +81-03-6890-4620

## KOREA

Phone: +82-2-2274-0748  
Fax: +82-2-2274-0794

## MALAYSIA

Phone: +60-3-2161-0322  
Fax: +60-3-2163-6312

## MEXICO

Phone: +52-55-3640-5060

## THE NETHERLANDS

Phone: +31-15-3808666  
Fax: +31-18-1641438

## RUSSIA

Veliky Novgorod  
Phone: +7-8162-55-7898  
Fax: +7-8162-55-7921

## Moscow

Phone: +7 495-585-1276  
Fax: +7 495-585-1279

## SAUDI ARABIA

Phone: +966-3-341-0278  
Fax: +966-3-341-7624

## SINGAPORE

Phone: +65-6861-6100  
Fax: +65-6861-7172

## SOUTH AFRICA

Phone: +27-11-452-1550  
Fax: +27-11-452-6542

## SOUTH & CENTRAL

AMERICA AND THE CARIBBEAN  
Phone: +55-12-2134-1201  
Fax: +55-12-2134-1238

## SPAIN

Phone: +34-93-652-6430  
Fax: +34-93-652-6444

## UNITED ARAB EMIRATES

Phone: +971-4-8991-777  
Fax: +971-4-8991-778

## UNITED KINGDOM

Bracknell  
Phone: +44-1344-460-500  
Fax: +44-1344-460-537

## Skelmersdale

Phone: +44-1695-526-00  
Fax: +44-1695-526-01

## UNITED STATES

Jacksonville, Florida  
Phone: +1-904-570-3409

## Corpus Christi, Texas

Phone: +1-361-881-8182  
Fax: +1-361-881-8246

## Deer Park, Texas

Phone: +1-281-884-1000  
Fax: +1-281-884-1010

## Houston, Texas

Phone: +1-281-671-1640  
Fax: +1-281-671-1735

[www.geoilandgas.com/valves](http://www.geoilandgas.com/valves)

\*Denotes a trademark of the General Electric Company.

Other company names and product names used in this document are the registered trademarks or trademarks of their respective owners.

©2016 General Electric Company. All rights reserved.

GEA19584A

12/2016

